 
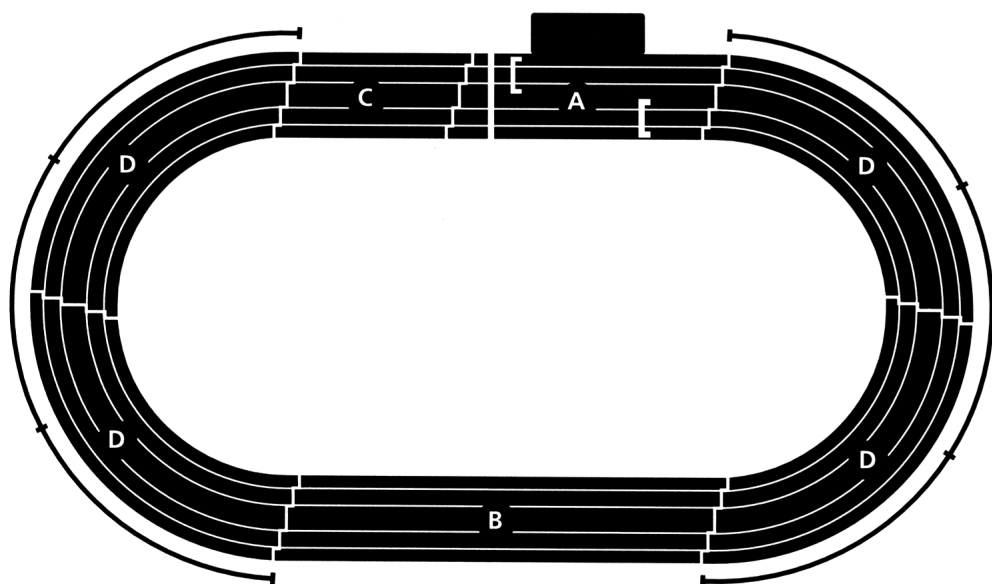 


**MICROSCALEXTRIC**

CE 12V

 
 
 
 
 
 
 
# WORLD CHAMPIONSHIP

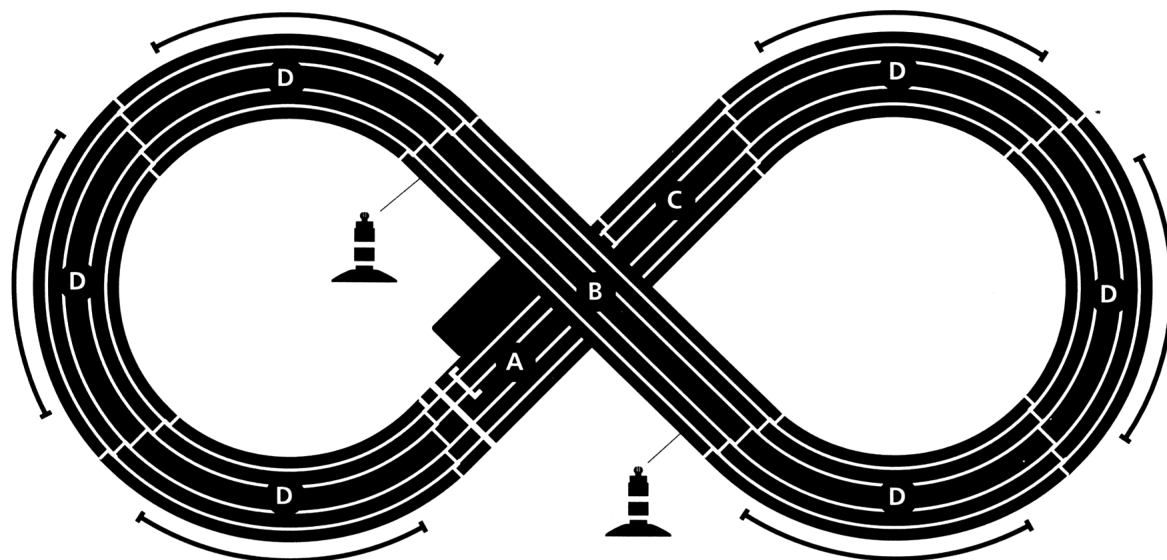

|  |     |
|--|-----|
|  | x 2 |
|  | x 2 |
|  | x 1 |
|  | x 1 |
|  | x 1 |
|  | x 1 |
|  | x 6 |
|  | x 2 |
|  | x 4 |
|  | x 2 |
|  | x 6 |

**Hornby Hobbies Limited**  
Westwood, Margate, Kent CT9 4JX

**Helpline**  
Telephone 01843 233525  
Fax 01843 233527

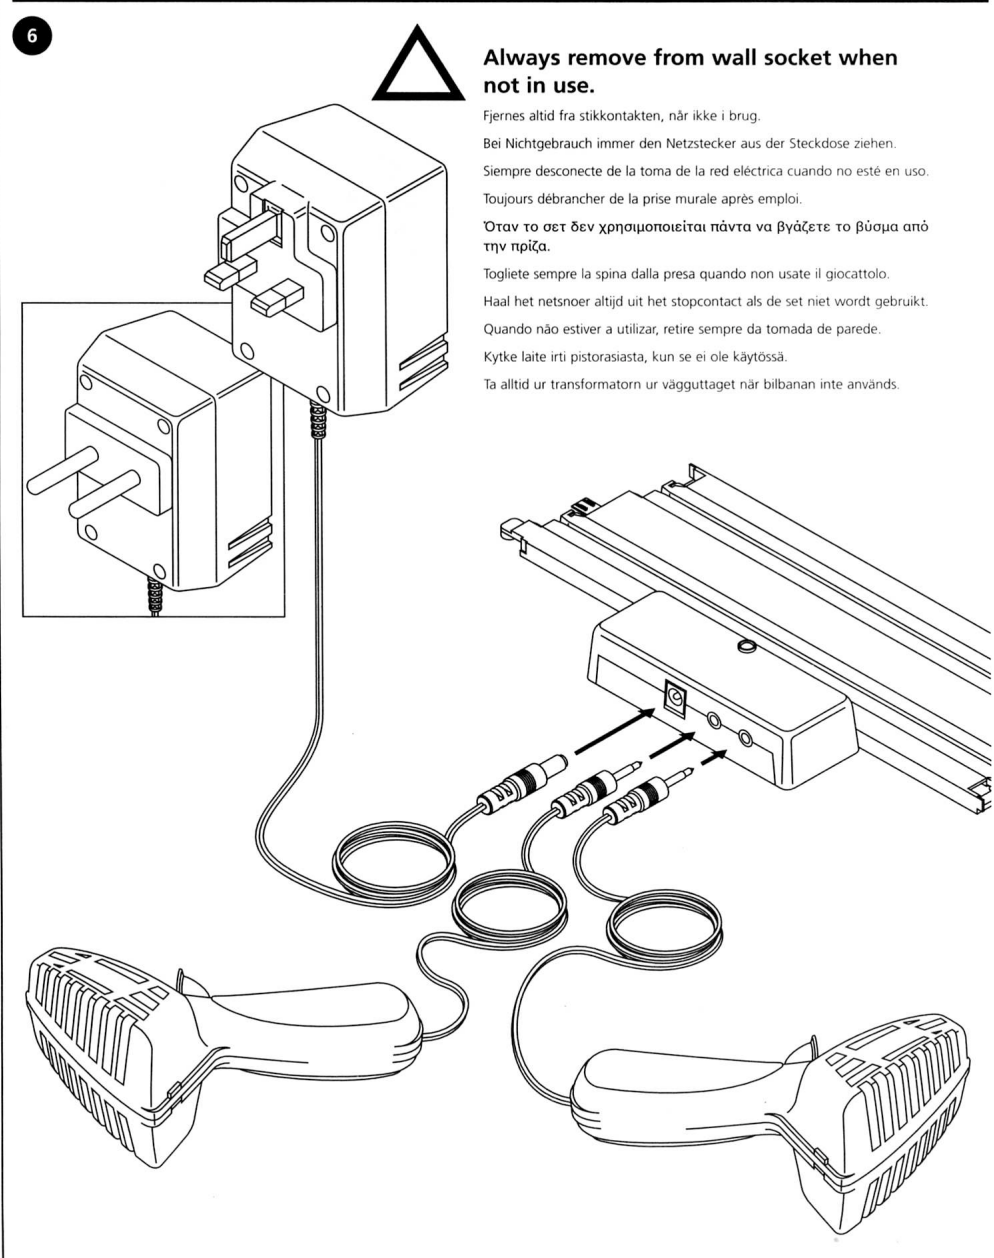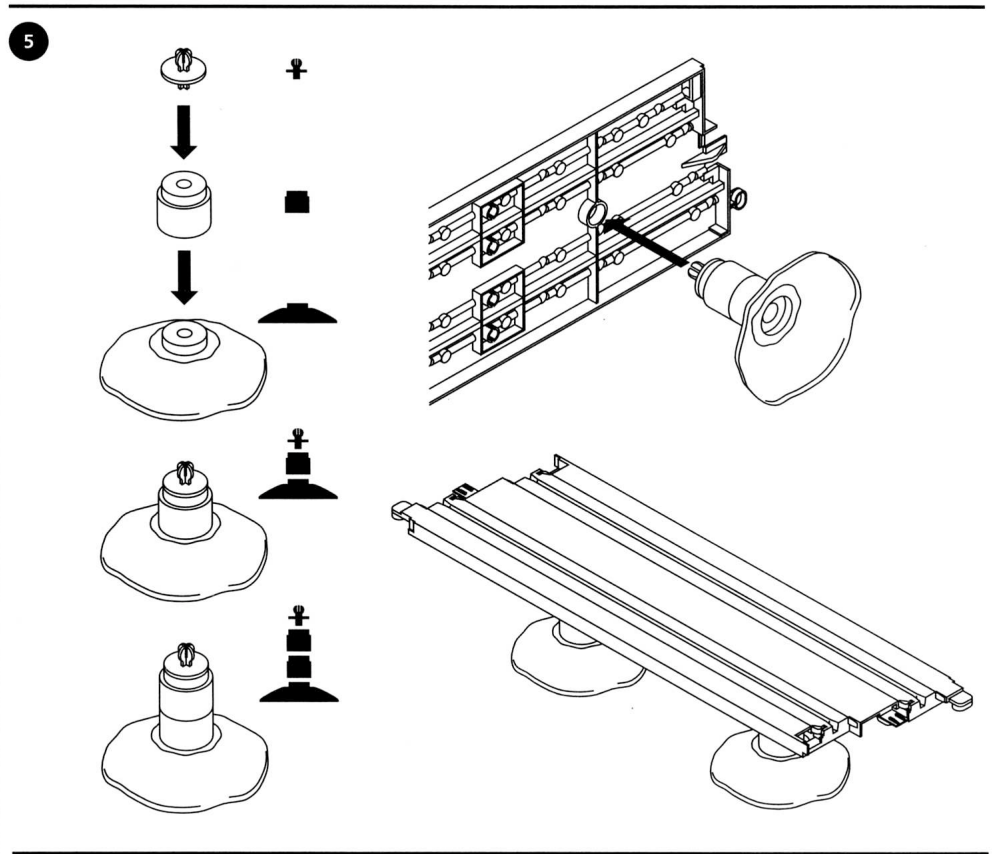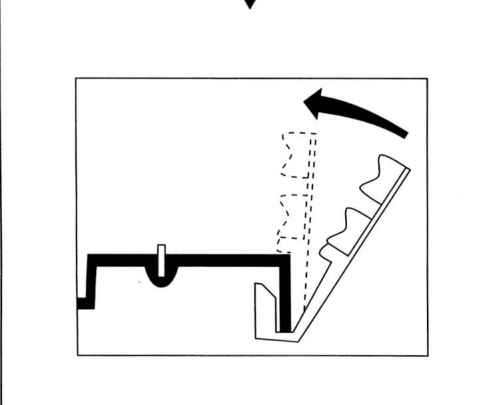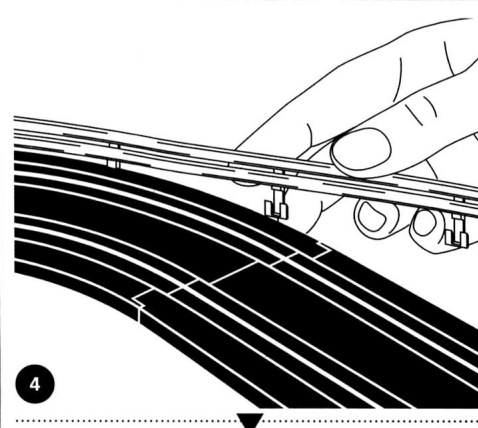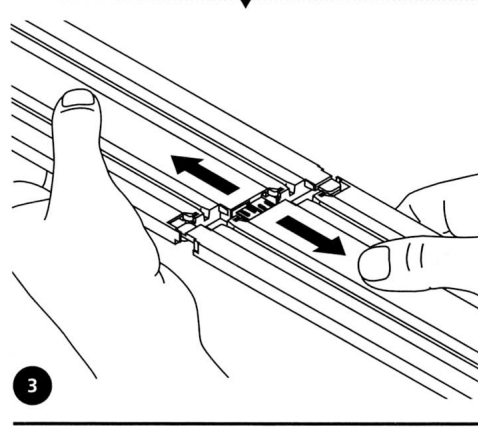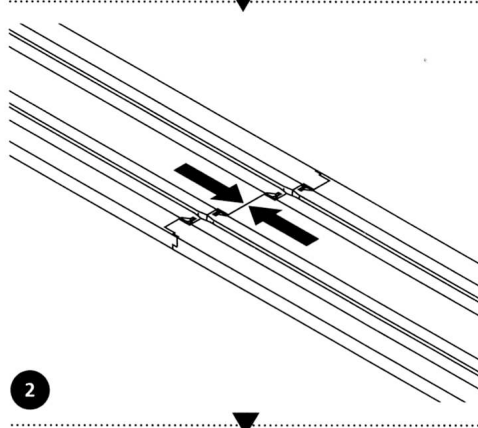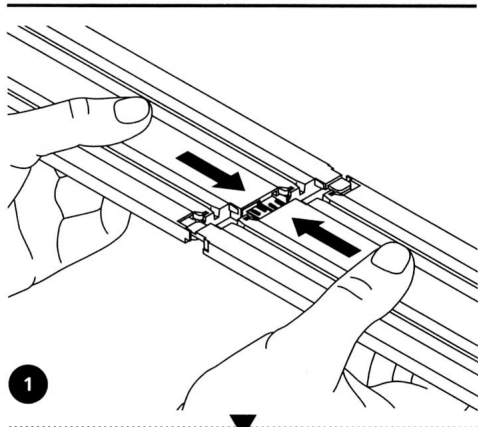


5

6






**Always remove from wall socket when not in use.**

 Fjernes altid fra stikkontakten, når ikke i brug.  
Bei Nichtgebrauch immer den Netzstecker aus der Steckdose ziehen.  
Siempre desconecte de la toma de la red eléctrica cuando no esté en uso.  
Toujours débrancher de la prise murale après emploi.  
Όταν το σετ δεν χρησιμοποιείται πάντα να βγάξετε το βύσμα από την πρίζα.  
Togliete sempre la spina dalla presa quando non usate il giocattolo.  
Haal het netsnoer altijd uit het stopcontact als de set niet wordt gebruikt.  
Quando não estiver a utilizar, retire sempre da tomada de parede.  
Kytke laite irti pistorasiasta, kun se ei ole käytössä.  
Ta alltid ur transformatorn ur vägguttaget när bilbanan inte används.

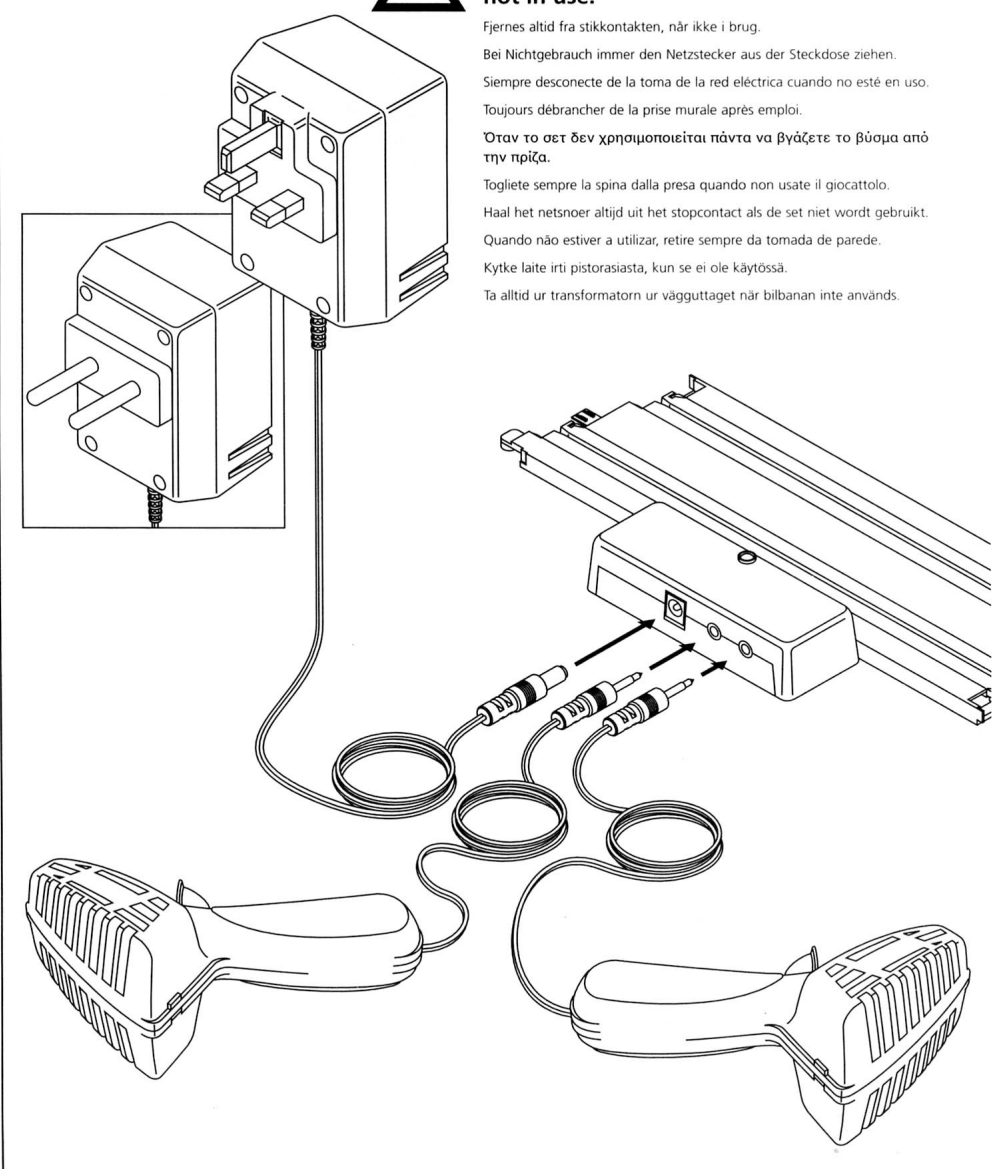

7

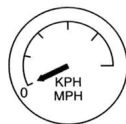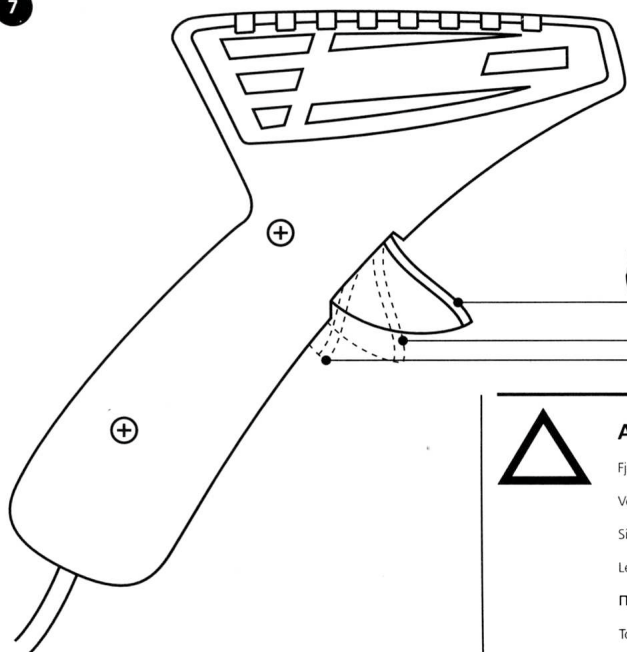   

### Always remove the transformer from the socket before cleaning the track.

Fjern altid transformeren fra stikkontakten før banen rengøres.

Vor Reinigen der Fahrbahn den Transformator immer aus der Netzsteckdose ziehen.

Siempre desconecte el transformador de la toma cuando vaya a limpiar la pista.

Le transformateur doit toujours être débranché de la prise avant tout nettoyage de la piste.

Πριν αρχίσετε το καθάρισμα της σιδηροτροχιάς πάντα να βγάξετε τον μετασχηματιστή από την πρίζα.

Togliete sempre il trasformatore dalla presa prima di pulire la pista.

 
 
 
 
Haal het netsnoer van de transformator uit het stopcontact alvorens de baan te reinigen.

Retire sempre a ficha do transformador da tomada antes de limpar a pista.


Ilrota muuntaja pistorasiasta aina ennen radan puhdistamista.

Ta alltid ur transformatorn ur vägguttaget innan du rengör banan.


8

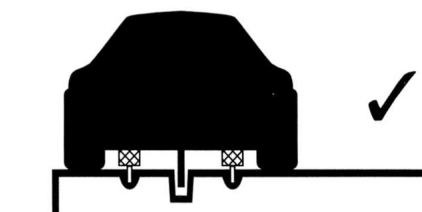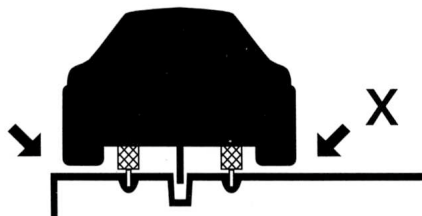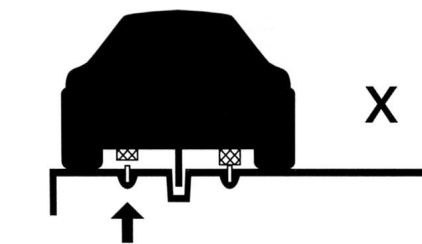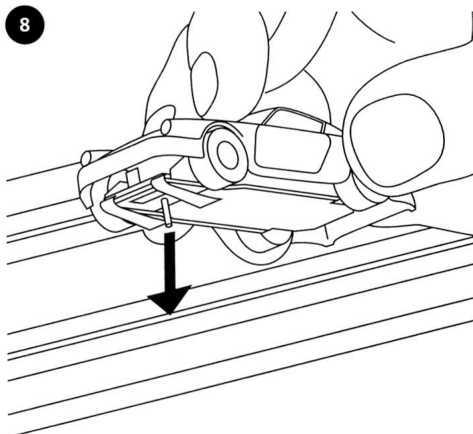


9

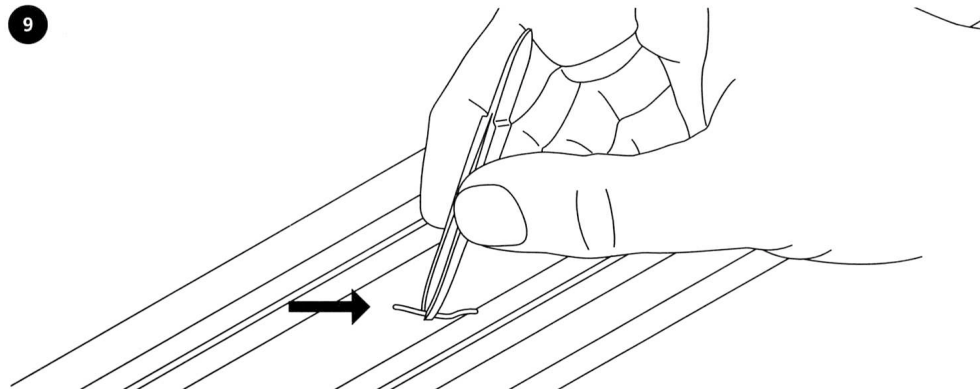 




10

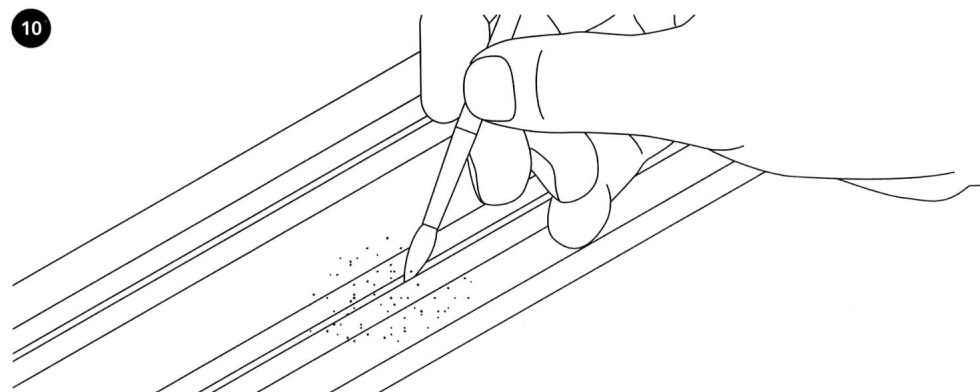 







11

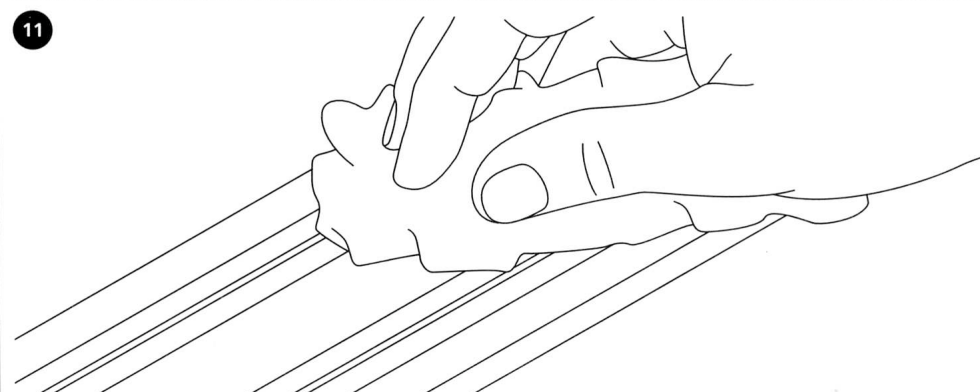 



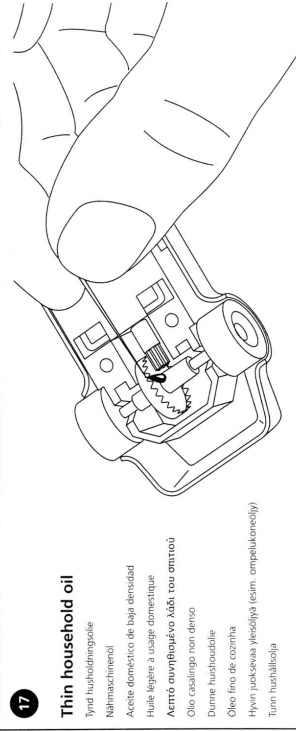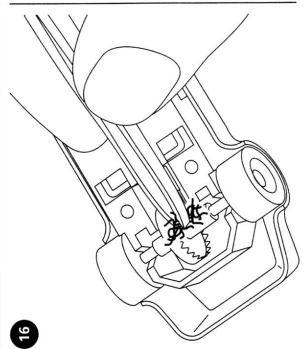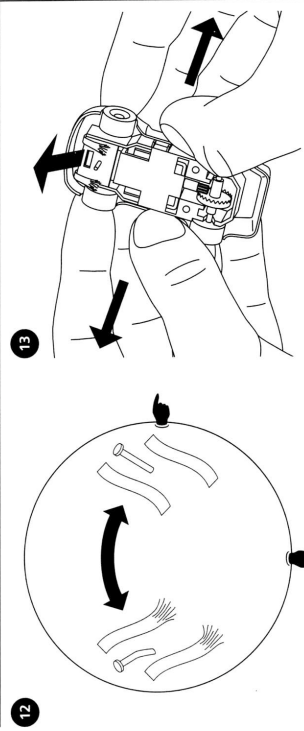   

      **Thin household oil**  
 Tynd husholdningsolje  
 Nahrmaschinenöl  
 Aceite doméstico de baja densidad  
 Huile légère à usage domestique  
 Aetno övverbúgðu Aðstíttu örntrou!  
 Ölio casalingo non denso  
 Durne husholdubile  
 Oleo fino de cozinha  
 Hyvin julkasava joulöljöllyä laim. ompakukonvelly!  
 Tunn hushallibölja

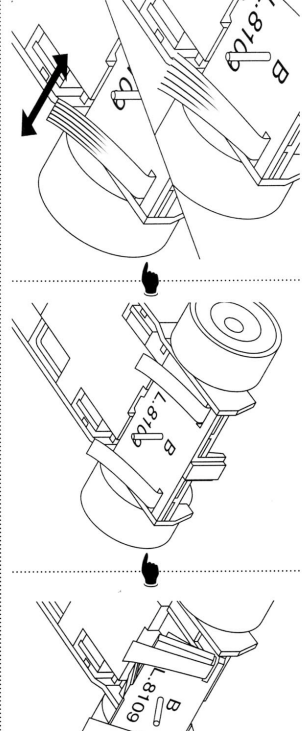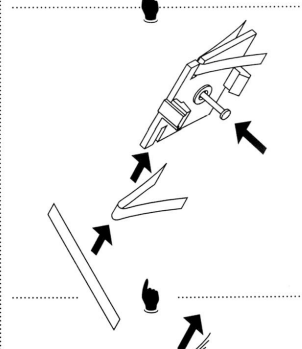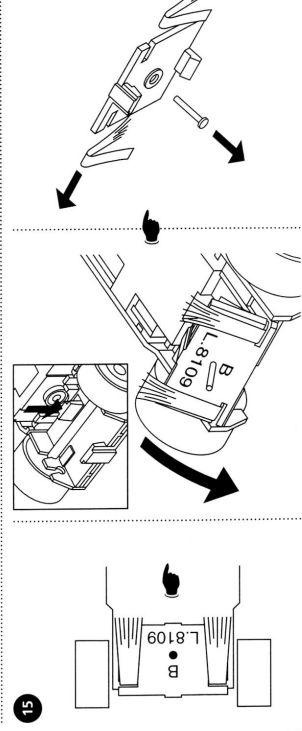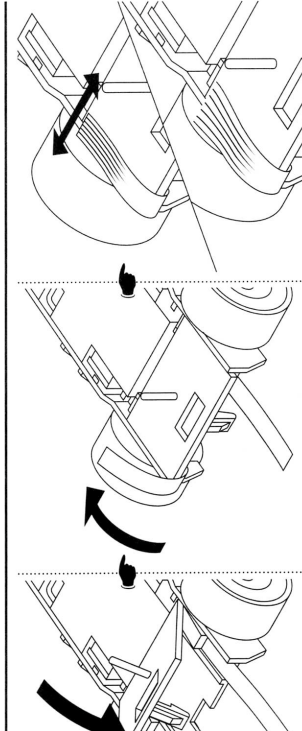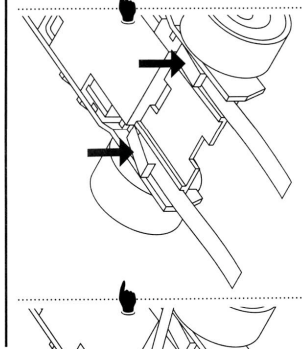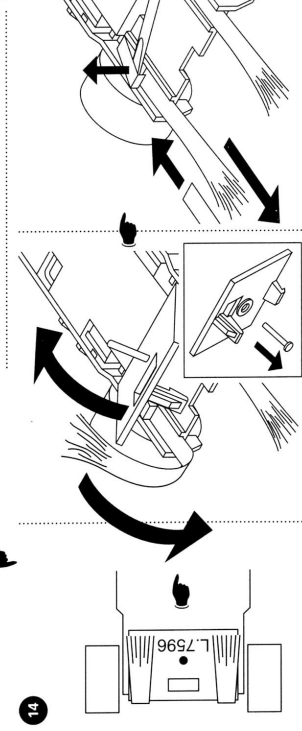

## Welcome to the world of Micro Scalextric racing.

Squeeze the trigger on your hand controller to drive your car. The more you squeeze the trigger, the faster it goes - so try just a small squeeze when you start.

Reduce your speed as you enter a bend, accelerate out of it.

There are magnets at the back of the car to help you stay on the track - but you still have to drive with care, or you will crash.

### Any problems?

Most problems are easily cured by cleaning and adjusting the pick-up braids under the car, and if necessary replacing the braids - see drawings 12-15. First, look on the underside of the car to see which type of braid plate is fitted. (Is the plate marked with a letter 'B' or not?) Then follow the appropriate instructions. Spare braids are supplied with your set. Also check the slots in the track for any debris, and wipe the track clean with a clean, soft, non-fluffy cloth. Do the same for the rear tyres of your cars. Never use abrasive materials or liquids.

### If you still have problems

- Check that all plugs are properly plugged in, as shown in drawing 6.
- Check that the power is turned on at the wall socket, and the socket is live.
- Check that your car is properly in its slot, and both pick-up braids are making good contact with the power rails, as shown in drawing 8.
- Have you fitted the chassis upside down in the body? Guide pin and braids must of course face outwards to the track.
- Check that you are not trying to run two cars in the same slot (they will go slower).
- Check that you are operating the correct hand throttle (try the other one).
- Try swapping over the two hand controllers to see if one is faulty, if so, replace it.
- Check that all sections of track are properly connected with good electrical connections throughout. See drawings 1-3. To improve contact if necessary, use a screwdriver or similar to adjust the ends of the metal strips in the track.

### If you keep on crashing ...

- Check that the guide pin on your car is not loose in its mounting plate. Spare guide pins and mounting plates are supplied with your set. Also check that the pick-up braids are not pushing up the front of the car more than they have to. See drawing 8.

But maybe all you have to do is ... Slow down!

### Short circuits

There's a safety cut-out in the transformer that automatically switches off the power if you get a short circuit. If that happens, unplug the transformer, correct the problem, plug the transformer back in and switch it on. The cut-out resets itself about 60 seconds after you unplugged the transformer. You also of course have to deal with whatever caused the short circuit. Look in particular for any metal objects that might have fallen across the track, such as a loose strand of wire from the pick-up braids.

### SAFETY NOTICES

- Micro Scalextric sets are for indoor use only.
- Sets may contain small parts, and some parts may have functional sharp points and edges. Not suitable for children under three years.

- The Wall Plug Transformer is not a toy. It is a 'transformer for toys' complying with European Standard EN60742. Check before use that the transformer is the correct voltage for your mains electricity supply.
- Only use your set with the Micro Scalextric transformer.
- Examine your transformer regularly for damage to the casing, plug pins and output cable. If there is any damage, do not use the set until the transformer has been replaced. Never attempt to open the transformer yourself.

- Do not connect the set to more than one power supply. The output terminals of the transformer must not be connected directly, or indirectly, to the output of any other AC circuit derived from a transformer or mains power supply.
- Always remove the transformer from the power socket before cleaning or adjusting any part of the set.
- Never clean any part of the set with fluids.

It is normal for hand throttles to get warm in use (and they may give off a slight smell when new). They also get warmer when you drive with the trigger held in one position. If a hand throttle becomes unnaturally hot, switch off the power and check:

- That you don't have two cars running on the same track.
- That the rear wheels of the car turn freely. Check for any debris.
- If the electric motor in the vehicle is jammed, remove the car from the track and let it cool down. Do not touch the motor casing. Contact your Micro Scalextric dealer for advice.
- Do not allow your cars to push or drag any object around the track.
- Do not place obstacles in the path of cars.
- Do not deliberately crash your cars with great force.
- Do not prevent the back wheels of the car from turning while operating the hand throttle. This will permanently damage the motor.

**If you have any problems that you cannot solve, please contact your Micro Scalextric dealer.**

Please keep these details for future reference.